



# GigaVUE V Series Quick Start Guide

GigaVUE Cloud Suite

Product Version: 6.0

Document Version: 1.0

(See Change Notes for document updates.)

**Copyright 2022 Gigamon Inc.. All rights reserved.**

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. No part of this publication may be reproduced, transcribed, translated into any language, stored in a retrieval system, or transmitted in any form or any means without the written permission of Gigamon Inc..

### **Trademark Attributions**

Gigamon and the Gigamon logo are trademarks of Gigamon in the United States and/or other countries. Gigamon trademarks can be found at [www.gigamon.com/legal-trademarks](http://www.gigamon.com/legal-trademarks). All other trademarks are the trademarks of their respective owners.

Gigamon Inc.  
3300 Olcott Street  
Santa Clara, CA 95054  
408.831.4000

# Change Notes

When a document is updated, the document version number on the cover page will indicate a new version and will provide a link to this Change Notes table, which will describe the updates.

Product Version	Document Version	Date Updated	Change Notes
6.0	1.0	08/31/2022	The original release of this document with 6.0 GA.

# Contents

<b>GigaVUE V Series Quick Start Guide</b> .....	<b>1</b>
Change Notes .....	3
Contents .....	4
<b>GigaVUE V Series Quick Start</b> .....	<b>6</b>
What is a V Series Node? .....	6
Note on Legacy Products .....	7
Volume-Based Licensing .....	8
Base Bundles .....	8
Bundle Replacement Policy .....	8
Add-on Packages .....	9
How GigaVUE-FM Tracks Volume-Based License Usage .....	9
Manage Volume-Based License .....	10
Default Trial Licenses .....	11
<b>GigaVUE V Series in VMware</b> .....	<b>12</b>
Prerequisites for Integrating V Series Nodes with vCenter .....	12
Network Firewall Requirements for ESXi .....	12
Recommended Instance Types for ESXi .....	13
Required VMware Virtual Center Privileges .....	14
Prerequisites for Integrating V Series Nodes with NSX-T .....	15
Network Firewall Requirements for NSX-T .....	16
Recommended Instance Types for NSX-T .....	17
<b>GigaVUE V Series in OpenStack</b> .....	<b>17</b>
Minimum Compute Requirements for OpenStack .....	17
Requirements for V Series 1 .....	17
Requirements for V Series 2 .....	18
Recommended Instance Type for OpenStack .....	19
Network Firewall Requirements for OpenStack .....	19
Network Requirements .....	20
<b>GigaVUE V Series in Azure</b> .....	<b>21</b>
Network Firewall Requirements for Azure .....	21
<b>GigaVUE V Series in AWS</b> .....	<b>24</b>
Recommended Instance Types for AWS .....	24
Network Firewall Requirements for AWS .....	24

<b>GigaVUE-FM Version Compatibility Matrix</b> .....	<b>26</b>
Version Compatibility for V Series 2 Configuration .....	26
Version Compatibility for V Series 1 Configuration .....	28
<b>Supported GigaSMART Operations</b> .....	<b>29</b>
<b>GigaVUE V Series Logs and Commands</b> .....	<b>31</b>
CLI Commands .....	31
Logs .....	32
<b>Additional Sources of Information</b> .....	<b>33</b>
<b>Documentation</b> .....	<b>33</b>
How to Download Software and Release Notes from My Gigamon .....	35
<b>Documentation Feedback</b> .....	<b>36</b>
<b>Contact Technical Support</b> .....	<b>37</b>
<b>Contact Sales</b> .....	<b>38</b>
<b>Premium Support</b> .....	<b>38</b>
<b>The Gigamon Community</b> .....	<b>38</b>
<b>Glossary</b> .....	<b>40</b>

# GigaVUE V Series Quick Start

GigaVUE Cloud Suites are cloud-native solutions that acquire, optimize and distribute selected traffic to security and monitoring tools. The suites enable enterprises to extend their security posture to both public and private cloud and also accelerate the time to detect threats to applications while taking advantage of a reliable, scalable and available cloud environment.

This solution includes three main components:

**GigaVUE V Series Node:** Processes network traffic and allows administrators to provide additional functionality including forwarding, de-duplication, and NetFlow generation

**G-vTAP Agents:** Acquires traffic from the host on which it is deployed and transfers it to the V Series Node.

**GigaVUE-FM:** Provides detailed analytics for the solution and can optionally orchestrate the deployed components.

## What is a V Series Node?

A V Series Node is a virtual machine running in the customer's infrastructure which processes and distributes network traffic. It plays the same role as an H Series appliance in a physical deployment, running many of the same GigaSMART applications and feeding data to tools in a similar manner. Because V Series nodes reside in a virtualized environment, inbound and outbound traffic is tunneled (because there are no physical device ports).

### V Series 1.x nodes:

- Platform support—AWS, Azure, Nutanix, OpenStack, "AnyCloud"
- GigaSMART support—Deduplication, NetFlow generation, Slicing, Masking
- Licensing—Licensed per platform (Sold in bundles of nodes, e.g. 100 / 1000), separate SKUs for each

### V Series 2.x nodes:

- Platform support—AWS, Azure, VMware (ESXi and NSX-T), OpenStack
- GigaSMART support—Deduplication, NetFlow, AMI, AFI, Slicing, Masking

- Licensing—Licensed according to traffic volume. With Volume Based Licensing, the customer can choose any supported platform, or combination of platforms.

GigaVUE Cloud Suite supports V Series 1 and V Series 2, however, V Series 2 is recommended. V Series 1 are older and are replaced by the newer and better V Series 2.

Cloud Platform	Guides	V Series
<b>Public Cloud</b>		
AWS	GigaVUE Cloud Suite for AWS Guide	V Series 1 and V Series 2
Azure	GigaVUE Cloud Suite for Azure Guide	V Series 1 and V Series 2
<b>Private Cloud</b>		
OpenStack	GigaVUE Cloud Suite for OpenStack Guide	V Series 2
VMware	GigaVUE Cloud Suite for VMware—GigaVUE V Series Guide	V Series 2
<b>Other Platforms</b>		
AnyCloud	GigaVUE Cloud Suite for AnyCloud Guide	V Series 1

## Note on Legacy Products

Before V Series nodes were supported in VMware environments, Gigamon's visibility solution utilized a different architecture. Virtualized traffic acquisition was performed by a GigaVUE-VM running on an ESXi hypervisor and that traffic was forwarded to H Series appliances for processing and distribution.

If you wish to keep that network architecture a V Series 2 node can be configured to forward all traffic to an H Series appliance, effectively functioning as a GigaVUE-VM. In order to start applying GigaSMART applications in the V Series node, you must allocate more RAM and vCPU resources to the nodes.

Topics:

- [Volume-Based Licensing](#)
- [GigaVUE V Series in VMware](#)
- [GigaVUE V Series in OpenStack](#)
- [GigaVUE V Series in Azure](#)
- [GigaVUE V Series in AWS](#)
- [GigaVUE-FM Version Compatibility Matrix](#)
- [Supported GigaSMART Operations](#)
- [GigaVUE V Series Logs and Commands](#)

## Volume-Based Licensing

All the V Series 2 nodes connected to GigaVUE-FM periodically reports statistics on the amount of traffic that flows through the V Series Nodes. The statistics give information on the actual data volume that flows through the V Series Nodes. All licensed applications, when running on the node, generate usage statistics. In the Volume-Based Licensing (VBL) scheme, a license entitles specific applications on your devices to use a specified amount of total data volume over the term of the license. The distribution of the license to individual nodes or devices becomes irrelevant for Gigamon's accounting purpose. GigaVUE-FM tracks the total amount of data processed by the various licensed applications and provides visibility into the actual amount of data, each licensed application is using on each node, and track the overuse if any. Volume-based licensing has a service period of 1 month. Service period is the period of time for which the total usage or overage is tracked. There is a grace period for each license that is encoded in the license file. The license effectively provides data allowance for this additional time after the official end time of the license.

For purchasing licenses with the Volume-Based License (VBL) option, contact our Sales. Refer to [Contact Sales](#).

## Base Bundles

GigaVUE-FM has the following three base bundles:

- SecureVUEPlus (highest)
- NetVUE (intermediate)
- CoreVUE (lowest)

There are two types of base bundle SKUs available:

- Term Based
- Perpetual

The number in the SKU indicates the total volume allowance of the SKU. For example, VBL-250T-BN-CORE-PL has a volume allowance of 250 terabytes.

## Bundle Replacement Policy

You can always upgrade to a higher bundle but you cannot move to a lower version. You cannot have two different base bundles at the same time however, you can have multiple base bundles of the same type. Once upgraded to a higher bundle, the existing lower bundles will be automatically deactivated.

## Add-on Packages

GigaVUE-FM allows you to add additional packages called add-on packages to the base bundles. These add-on packages allow you to add additional applications to your base bundles. Add-on packages have their own start/end date and volume specifications.

### Rules for add-on packages:

- Add-on packages can only to be added when there is an active base bundle available in GigaVUE-FM.
- The base bundle limits the total volume usage of the add-on package.
- If your add-on package has volume allowance less than the base bundle, then your add-on package can only handle volume allocated for add-on package.
- When the life term of an add-on package extends beyond the base bundle, then when the base bundle expires, the volume allowance of the add-on package will be reduced to zero until a new base bundle is added.

There are two types of add-on SKU available:

1. **Term Based:** These add-on SKUs expire after a limited period of time.

The list of the available term based SKUs:

- VBL-50T-ADD-5GC
- VBL-250T-ADD-5GC
- VBL-2500T-ADD-5GC
- VBL-25KT-ADD-5GC

2. **Perpetual:** These add-on SKUs never expires.

The list of the available perpetual SKUs:

- VBL-250T-ADD-5GC-PL
- VBL-2500T-ADD-5GC-PL

## How GigaVUE-FM Tracks Volume-Based License Usage

GigaVUE-FM tracks the license usage for each V series node as follows:

- When you create and deploy a monitoring session, GigaVUE-FM allows you to use only those applications that are licensed at that point.
- When a license goes into grace period, you will be notified, along with a list of monitoring sessions that would be affected after the expiry of the grace period.

- When a license expires (and has not been renewed yet), the monitoring sessions using the corresponding license will be undeployed, but not deleted from the database.
- When a license is renewed or newly imported, the undeployed monitoring sessions will be redeployed.

## Manage Volume-Based License

To manage active Volume-Based License:

1. On the left navigation pane, click .
2. Go to **System > Licenses**. From the top navigation bar, select the **VBL Active** from the **FM/Cloud** drop-down.

This page lists information like SKUs, Bundles, Start date, End date, Type, and Activation ID of the Volume-Based Licenses that are active. The expired licenses are automatically moved to the **VBL Inactive** page, which can be found under the **FM/Cloud** drop-down in the top navigation bar.

Click on the individual SKU to view the list of applications available for that particular SKU.

Use the following buttons to manage your active VBL.


Button	Description
<b>Activate Licenses</b>	Use this button to activate a Volume-Based License. Refer <a href="#">Activate Licenses</a> for more information.
<b>Email Volume Usage</b>	Use this button to send the volume usage details to the email recipients.
<b>Filter</b>	Use this option to narrow down the list of active Volume-Based Licenses that are displayed on the VBL active page.
<b>Export</b>	Use this button to export the details in the VBL active page to a CSV or XLSX file.

For more detailed information on dashboards and reports generation for Volume-Based Licensing refer the following table:

For details about:	Reference section	Guide
How to generate Volume-Based License reports	<a href="#">Generate VBL Usage Reports</a>	GigaVUE Administration Guide
Volume-Based Licensed report details	<a href="#">Volume Based License Usage Report</a>	GigaVUE Administration Guide
Fabric health analytics dashboards for Volume-Based Licenses usage	<a href="#">Dashboards for Volume Based Licenses Usage</a>	GigaVUE-FM User Guide

## Default Trial Licenses

After you install GigaVUE-FM, a default free 1TB of CoreVUE trial volume-based license (VBL) is provided one-time for 30 days (from the date of installation).

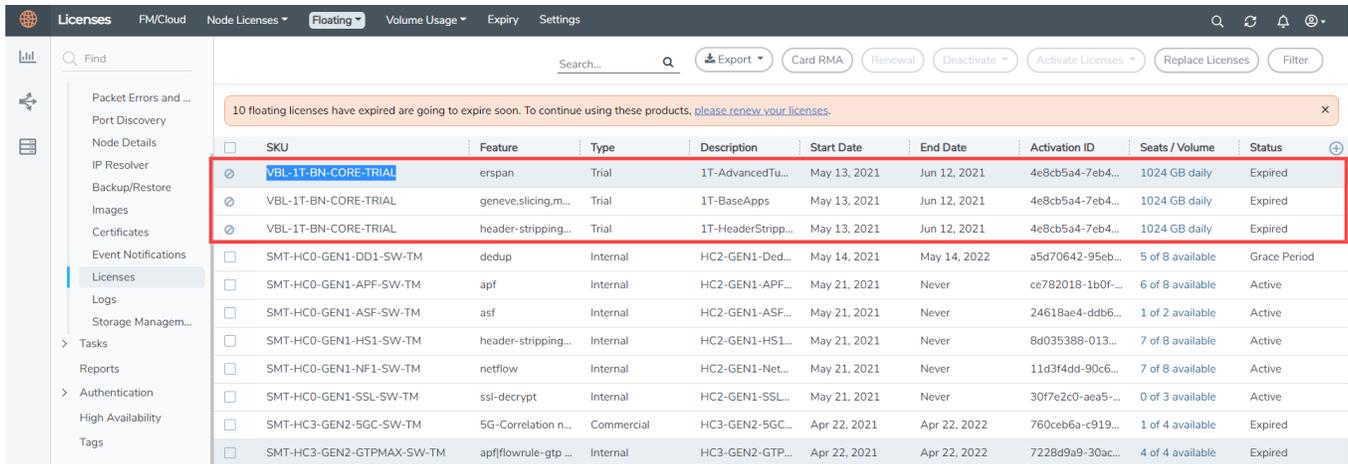

SKU	Feature	Type	Description	Start Date	End Date	Activation ID	Seats / Volume	Status
VBL-1T-BN-CORE-TRIAL	erspan	Trial	1T-AdvancedTu...	May 13, 2021	Jun 12, 2021	4e8cb5a4-7eb4...	1024 GB daily	Expired
VBL-1T-BN-CORE-TRIAL	geneve.slicing.m...	Trial	1T-BaseApps	May 13, 2021	Jun 12, 2021	4e8cb5a4-7eb4...	1024 GB daily	Expired
VBL-1T-BN-CORE-TRIAL	header-stripping...	Trial	1T-HeaderStripp...	May 13, 2021	Jun 12, 2021	4e8cb5a4-7eb4...	1024 GB daily	Expired
SMT-HC0-GEN1-DD1-SW-TM	dedup	Internal	HC2-GEN1-Ded...	May 14, 2021	May 14, 2022	a5d70642-95eb...	5 of 8 available	Grace Period
SMT-HC0-GEN1-APF-SW-TM	apf	Internal	HC2-GEN1-APF...	May 21, 2021	Never	ce782018-1b0f...	6 of 8 available	Active
SMT-HC0-GEN1-ASF-SW-TM	asf	Internal	HC2-GEN1-ASF...	May 21, 2021	Never	24618ae4-ddb6...	1 of 2 available	Active
SMT-HC0-GEN1-HS1-SW-TM	header-stripping...	Internal	HC2-GEN1-HS1...	May 21, 2021	Never	8d035388-013...	7 of 8 available	Active
SMT-HC0-GEN1-NF1-SW-TM	netflow	Internal	HC2-GEN1-Net...	May 21, 2021	Never	11d3f4dd-90c6...	7 of 8 available	Active
SMT-HC0-GEN1-SSL-SW-TM	ssl-decrypt	Internal	HC2-GEN1-SSL...	May 21, 2021	Never	30f7e2c0-aea5...	0 of 3 available	Active
SMT-HC3-GEN2-5GC-SW-TM	5G-Correlation n...	Commercial	HC3-GEN2-5GC...	Apr 22, 2021	Apr 22, 2022	760ceb6a-c919...	1 of 4 available	Expired
SMT-HC3-GEN2-GTPMAX-SW-TM	apfflowrule-gtp...	Internal	HC3-GEN2-GTP...	Apr 22, 2021	Apr 22, 2022	7228d9a9-30ac...	4 of 4 available	Expired

This license includes the following applications:

- ERSPAN
- Geneve
- Slicing
- Masking
- Trailer
- Tunneling
- Load Balancing
- Enhanced Load Balancing
- Flowmap
- Header-stripping
- Add header

**NOTE:** There is no grace period for the trial license. If you do not have any other Volume-based licenses installed, then after 30 days, on expiry of the trial license, any deployed monitoring sessions will be undeployed from the existing V series 2.0 nodes.

To deactivate the trial VBL refer to [Delete Default Trial Licenses](#) section for details.

# GigaVUE V Series in VMware

## Prerequisites for Integrating V Series Nodes with vCenter

Few VMware vCenter versions are supported, with the GigaVUE V Series nodes hosted on ESXi hosts. Refer to the Release Notes for the hardware requirements on which VMware ESXi runs V Series Node.

**NOTE:** To support internationalized characters in the VMware vCenter environment ensure that the vCenter character encoding is set to UTF-8.

The following are the prerequisites for integrating V Series nodes with ESXi:

- VMware ESXi Standard Version must be either 6.7 u3 or 7.0.
- VMware vCenter Server Version must be either 6.7 u3 or 7.0.

**NOTE:** Both VMware ESXi Standard Version and VMware vCenter Server Version must be same. For example, if the VMware ESXi Standard Version is 6.7 u3, the VMware vCenter Server Version must also be 6.7 u3.

- ESXi hosts must have the minimum vCPU and memory resources.
- GigaVUE-FM version 5.12.xx or later.
- V Series 2.x device OVA image file.
- All the target VMs must have VMware guest tools or Open VM tools if workload VMs is selected based on IP address.
- Port number 8889 must be available for GigaVUE-FM to access V Series nodes.

The V Series 2 Node OVA image files can be downloaded from the [Gigamon Customer Portal](#).

## Network Firewall Requirements for ESXi

Following are the Network Firewall Requirements for V Series 2 node deployment.

Direction	Type	Protocol	Port	Source/Destination	Purpose
<b>GigaVUE-FM</b>					
Inbound	• HTTPS	TCP	• 443	Administrator Subnet	Management

Direction	Type	Protocol	Port	Source/Destination	Purpose
	<ul style="list-style-type: none"> <li>SSH</li> </ul>		<ul style="list-style-type: none"> <li>22</li> </ul>		connection to GigaVUE-FM
Outbound	HTTPS	TCP	443	All ESXi hosts IP and vCenter IP	Allows GigaVUE-FM to communicate with vCenter and all ESXi hosts to import the V Series OVA files
Outbound	Custom TCP Rule	TCP	8889	V Series 2 Node IP	Allows GigaVUE-FM to communicate with V Series node
<b>V Series 2 node</b>					
Inbound	Custom TCP Rule	TCP	8889	GigaVUE-FM IP	Allows GigaVUE-FM to communicate with V Series node
Inbound	<ul style="list-style-type: none"> <li>UDP</li> <li>IP</li> </ul>	<ul style="list-style-type: none"> <li>UDP (VXLAN)</li> <li>GRE</li> <li>UDPGRE</li> </ul>	<ul style="list-style-type: none"> <li>4789</li> <li>Protocol 47</li> <li>4754</li> </ul>	Ingress Tunnel	Allows to UDPGRE Tunnel to communicate and tunnel traffic to V Series nodes
Outbound	Custom UDP Rule	UDP (VXLAN)	VXLAN (default 4789)	Tool IP	Allows V Series node to communicate and tunnel traffic to the Tool
Outbound (optional)	ICMP	ICMP	<ul style="list-style-type: none"> <li>echo request</li> <li>echo reply</li> </ul>	Tool IP	Allows V Series node to health check tunnel destination traffic

## Recommended Instance Types for ESXi

The instance size of the V Series is configured on the OVF file and packaged as part of the OVA image file. The following table lists the available instance types and sizes based on memory and the number of vCPUs for a single V series node. Instance sizes can be different for V Series nodes in different ESXi hosts and the default size is Small.

Type	Memory	vCPU	Disk space	vNIC
Small	4GB	2 vCPU	8GB	1 Management interface, 1 Tunnel interface, and 8 vTAP interfaces
Medium	8GB	4 vCPU		
Large	16GB	8 vCPU		

**Note:** Refer to Support, Sales, or Professional Services for deployment optimization.

## Required VMware Virtual Center Privileges

This section lists the minimum privileges required for the GigaVUE-FM user in Virtual Center. You assign privileges to Virtual Center users by selecting Roles > Administration > Role, and then use the Edit Role dialog box in vCenter. Roles should be applied at the vSphere Virtual Center level and not the Data Center or Host levels.

The following table lists the minimum required permissions for GigaVUE-FM to manage the virtual center.

Category	Required Privilege	Purpose
Host	Configuration <ul style="list-style-type: none"> <li>• Network Configuration</li> </ul>	VSS Tapping
	Inventory <ul style="list-style-type: none"> <li>• Modify Cluster</li> </ul>	Pin V Series Node to the host in cluster configurations. This prevents automatic migration.
Datastore	<ul style="list-style-type: none"> <li>• Allocate space</li> </ul>	V Series Node Deployment
Distributed Switch	<ul style="list-style-type: none"> <li>• VSPAN Operation</li> </ul>	VDS Tapping
Network	<ul style="list-style-type: none"> <li>• Assign network</li> <li>• Configure</li> </ul>	V Series Node Deployment/VSS Tapping V Series Node Deployment
Resource	<ul style="list-style-type: none"> <li>• Assign virtual machine to resource pool</li> </ul>	V Series Node Deployment
vApp	<ul style="list-style-type: none"> <li>• Import</li> <li>• vApp instance configuration</li> </ul>	V Series Node Deployment V Series Node Deployment
Virtual machine	Configuration <ul style="list-style-type: none"> <li>• Add new disk</li> <li>• Add or remove device</li> <li>• Modify device settings</li> </ul>	V Series Node Deployment V Series Node Deployment/VSS Tapping
	Interaction <ul style="list-style-type: none"> <li>• Connect devices</li> <li>• Power on</li> </ul>	V Series Node Deployment V Series Node Deployment V Series Node Deployment

Category	Required Privilege	Purpose
	<ul style="list-style-type: none"> <li>Power off</li> </ul>	
	<b>Inventory</b> <ul style="list-style-type: none"> <li>Create from existing</li> <li>Remove</li> </ul>	V Series Node Deployment V Series Node Deployment
	<b>Provisioning</b> <ul style="list-style-type: none"> <li>Clone virtual machine</li> </ul>	V Series Node Deployment

## Prerequisites for Integrating V Series Nodes with NSX-T

Refer to the Release Notes for the hardware requirements on which VMware NSX-T runs V Series Node.

The following are the prerequisites for integrating V Series nodes with NSX-T:

- VMware vCenter Standard Version must be 6.7 u3, and 7.0 with the required privileges. Refer to [Required VMware Virtual Center Privileges](#) for more information on vCenter privileges.
- Before deploying V Series nodes through GigaVUE-FM, Service segments must be created in the NSX-T manager.
- NSX-T versions must be 2.5.1, 2.5.2, 3.0, 3.0.2, 3.1.2. If you have other versions, please contact Gigamon support.

**NOTE:** NSX-T is different than the ESXi implementation for hosting the V Series OVA file on an image server. In that you need to have an image server to host the V Series image file. The default http port supported is 80. However, if the image server listens on any port other than the default http port then, the port number should be provided in the image URL. For example: If the image server listens on port 8080, then the image URL should be `http://IP_Address:8080/path_to_ova` .

- GigaVUE-FM version 5.12.xx or later.
- V Series 2.2 device OVA image file.
- Port number 8889 must be available for GigaVUE-FM to access V Series nodes.

**NOTE:** You cannot have both GigaVUE-VM and V Series node visibility solutions deployed on the same vCenter.

The V Series 2.x Node OVA image files can be downloaded from the [Gigamon Customer Portal](#).

## Network Firewall Requirements for NSX-T

Following are the Network Firewall Requirements for V Series 2 node deployment.

Direction	Type	Protocol	Port	Source/Destination	Purpose
<b>GigaVUE-FM</b>					
Inbound	<ul style="list-style-type: none"> <li>• HTTPS</li> <li>• SSH</li> </ul>	TCP	<ul style="list-style-type: none"> <li>• 443</li> <li>• 22</li> </ul>	Administrator Subnet	Management connection to GigaVUE-FM
Outbound	HTTPS	TCP	443	All ESXi hosts IP and vCenter IP	Allows GigaVUE-FM to communicate with vCenter and all ESXi hosts to import the V Series OVA files
Outbound	Custom TCP Rule	TCP	8889	V Series 2 Node IP	Allows GigaVUE-FM to communicate with V Series node
<b>V Series 2 node</b>					
Inbound	Custom TCP Rule	TCP	8889	GigaVUE-FM IP	Allows GigaVUE-FM to communicate with V Series node
Inbound	<ul style="list-style-type: none"> <li>• UDP</li> <li>• IP</li> </ul>	<ul style="list-style-type: none"> <li>• UDP (VXLAN)</li> <li>• GRE</li> <li>• UDPGRE</li> </ul>	<ul style="list-style-type: none"> <li>• 4789</li> <li>• Protocol 47</li> <li>• 4754</li> </ul>	Ingress Tunnel	Allows to UDPGRE Tunnel to communicate and tunnel traffic to V Series nodes
Outbound	Custom UDP Rule	UDP (VXLAN)	VXLAN (default 4789)	Tool IP	Allows V Series node to communicate and tunnel traffic to the Tool
Outbound (optional)	ICMP	ICMP	<ul style="list-style-type: none"> <li>• echo request</li> <li>• echo reply</li> </ul>	Tool IP	Allows V Series node to health check tunnel destination traffic

## Recommended Instance Types for NSX-T

The instance size of the V Series is configured on the OVF file and packaged as part of the OVA image file. The following table lists the available instance types and sizes based on memory and the number of vCPUs for a single V series node. Instance sizes can be different for V Series nodes in different NSX-T hosts and the default size is Small.

Type	Memory	vCPU	Disk space	Recommended Traffic Volume
Small	4GB	2 vCPU	8GB	upto 2G
Medium	8GB	4 vCPU	8GB	upto 4G
Large	16GB	8 vCPU	8GB	More than 4G

For more specific throughput information on specific applications, please contact Gigamon Support.

# GigaVUE V Series in OpenStack

This section describes the requirements and prerequisites for configuring the GigaVUE Cloud Suite for OpenStack. Refer to the following section for details.

- [Minimum Compute Requirements for OpenStack](#)
- [Recommended Instance Type for OpenStack](#)
- [Security Group](#)
- [Network Requirements](#)

## Minimum Compute Requirements for OpenStack

In OpenStack, flavors set the vCPU, memory, and storage requirements for an image. Gigamon recommends that you create a flavor that matches or exceeds the minimum recommended requirements listed in the following tables.

### Requirements for V Series 1

Compute Instances	vCPU	Memory	Disk Space	Description
G-vTAP Agent	2 vCPU	4GB	N/A	Available as rpm or Debian package. Instances can have a single vNIC or dual vNICs configured for monitoring the traffic.
G-vTAP OVS Agent	N/A	N/A	N/A	Available as rpm or Debian package.

Compute Instances	vCPU	Memory	Disk Space	Description
G-vTAP Controller	1 vCPU	4GB	8GB	Based on the number of agents being monitored, multiple controllers will be required to scale out horizontally.
V Series Node	2 vCPU	3.75GB	20GB	NIC 1: Monitored Network IP; Can be used as Tunnel IP NIC 2: Tunnel IP (optional) NIC 3: Management IP
V Series Controller	1 vCPU	4GB	8GB	Based on the number of GigaVUE V Series nodes being monitored, multiple controllers will be required to scale out horizontally
GigaVUE-FM	2 vCPU	16GB	2x 40GB	GigaVUE-FM must be able to access the controller instance for relaying the commands. Use a flavor with a root disk and an ephemeral disk each of minimum 40GB.

## Requirements for V Series 2

Compute Instances	vCPU	Memory	Disk Space	Description
G-vTAP Agent	2 vCPU	4GB	N/A	Available as rpm or Debian package. Instances can have a single vNIC or dual vNICs configured for monitoring the traffic.
G-vTAP Controller	1 vCPU	4GB	8GB	Based on the number of agents being monitored, multiple controllers will be required to scale out horizontally.
V Series Node	2 vCPU	3.75GB	20GB	NIC 1: Monitored Network IP; Can be used as Tunnel IP NIC 2: Tunnel IP (optional) NIC 3: Management IP
V Series Proxy	1 vCPU	4GB	8GB	Based on the number of GigaVUE V Series nodes being monitored, multiple controllers will be required to scale out horizontally
GigaVUE-FM	4 vCPU	8GB	40GB	GigaVUE-FM must be able to access the controller instance for relaying the commands. Use a flavor with a root disk of minimum 40GB and an ephemeral disk of minimum 41GB.

## Recommended Instance Type for OpenStack

The instance size of the V Series is configured and packaged as part of the qcow2 image file. The following table lists the available instance types and sizes based on memory and the number of vCPUs for a single V series node. Instances sizes can be different for V Series nodes in different OpenStack VMs and the default size is Small.

Type	Memory	vCPU	Disk space	vNIC
Small	4GB	2 vCPU	8GB	1 Management interface, 1 to 8 Tunnel interfaces
Medium	8GB	4 vCPU		
Large	16GB	8 vCPU		

## Network Firewall Requirements for OpenStack

Direction	Ether Type	Protocol	Port	CIDR	Purpose
<b>GigaVUE-FM</b>					
Inbound	HTTPS	TCP	443	Any IP address	Allows users to connect to the GigaVUE-FM GUI.
Inbound	IPv4	UDP	53	Any IP address	Allows GigaVUE-FM to communicate with standard DNS server
<b>G-vTAP Controller</b>					
Inbound	IPv4	TCP	9900	GigaVUE-FM IP address	Allows GigaVUE-FM to communicate with G-vTAP Controllers
<b>G-vTAP Agent</b>					
Inbound	IPv4	TCP	9901	G-vTAP Controller IP address	Allows G-vTAP Controllers to communicate with G-vTAP Agents
<b>V Series Proxy</b>					
Inbound	IPv4	TCP	8890	GigaVUE-FM IP address	Allows GigaVUE-FM to communicate with GigaVUE V Series Proxys.

Direction	Ether Type	Protocol	Port	CIDR	Purpose
<b>V Series 2 Node</b>					
Inbound	Custom TCP Rule	TCP(6)	8889	GigaVUE V Series Proxy IP address	Allows GigaVUE V Series Proxys to communicate with GigaVUE V Series nodes
<b>GRE Traffic</b>					
Inbound	Custom Protocol Rule	GRE (47)	47	Any IP address	Allows mirrored traffic from G-vTAP Agents to be sent to GigaVUE V Series nodes using the L2 GRE or VXLAN tunnel
Outbound	Custom Protocol Rule	GRE (47)	47	Any IP address	Allows monitored traffic from GigaVUE V Series nodes to be sent to the monitoring tools using the L2 GRE or VXLAN tunnel
<b>VXLAN Traffic</b>					
Inbound	Custom UDPRule	UDP	Default port is 4789 and can be any port	Any IP address	Allows mirrored traffic from G-vTAP Agents to be sent to GigaVUE V Series nodes using the VXLAN tunnel
Outbound	Custom UDPRule	UDP	Default port is 4789 and can be any port	Any IP address	Allows monitored traffic from GigaVUE V Series nodes to be sent to the monitoring tools using the VXLAN tunnel

**NOTE:** The Security Group Rules table lists only the ingress rules. Make sure the egress ports are open for communication. Along with the ports listed in the Security Group Rules table, make sure the suitable ports required to communicate with Service Endpoints such as Identity, Compute, and Cloud Metadata are also open.

## Network Requirements

The following table lists the recommended requirements to setup the network topology.

Network	Purpose
<b>Management</b>	Identify the subnets that GigaVUE-FM uses to communicate with the GigaVUE V Series nodes and controllers.
<b>Data</b>	Identify the subnets that receives the mirrored tunnel traffic from the monitored instances.  In data network, if a tool subnet is selected then the V Series node egress traffic on to the destinations or tools.

# GigaVUE V Series in Azure

## Network Firewall Requirements for Azure

Following is the Network Firewall Requirements for V Series 2 node deployment.

Direction	Type	Protocol	Port	CIDR	Purpose
<b>GigaVUE-FM</b>					
Inbound	<ul style="list-style-type: none"> <li>HTTPS</li> <li>SSH</li> </ul>	TCP	<ul style="list-style-type: none"> <li>443</li> <li>22</li> </ul>	Administrator Subnet	Management connection to GigaVUE-FM
Outbound	Custom TCP Rule	TCP(6)	9900	GigaVUE-FM IP	Allows G-vTAP Controller to communicate with GigaVUE-FM
Outbound (optional)	Custom TCP Rule	TCP	8890	V Series Proxy IP	Allows GigaVUE-FM to communicate with V Series Proxy
Outbound	Custom TCP Rule	TCP	8889	V Series 2 Node IP	Allows GigaVUE-FM to communicate with V Series node
<b>G-vTAP Controller</b>					
Inbound	Custom TCP Rule	TCP(6)	9900	GigaVUE-FM IP	Allows G-vTAP Controller to communicate with GigaVUE-FM
Outbound	Custom TCP Rule	TCP(6)	9901	G-vTAP Controller IP	Allows G-vTAP Controller to communicate with G-vTAP Agents
<b>G-vTAP Agent</b>					
Inbound	Custom TCP Rule	TCP(6)	9901	G-vTAP Controller IP	Allows G-vTAP Agents to communicate with G-vTAP Controller
Outbound	<ul style="list-style-type: none"> <li>UDP</li> <li>IP</li> </ul>	<ul style="list-style-type: none"> <li>UDP (VXLAN)</li> </ul>	VXLAN (default)	G-vTAP Agent or Subnet IP	Allows G-vTAP Agents to (VXLAN/L2GRE) tunnel

Direction	Type	Protocol	Port	CIDR	Purpose
		<ul style="list-style-type: none"> <li>IP Protocol (L2GRE)</li> </ul>	4789)		traffic to V Series nodes
<b>V Series Proxy (optional)</b>					
Inbound	Custom TCP Rule	TCP	8890	GigaVUE-FM IP	Allows GigaVUE-FM to communicate with V Series Proxy
Outbound	Custom TCP Rule	TCP	8889	V Series 2 node IP	Allows V Series Proxy to communicate with V Series node
<b>V Series 2 node</b>					
Inbound	Custom TCP Rule	TCP	8889	<ul style="list-style-type: none"> <li>GigaVUE-FM IP</li> <li>V Series Proxy IP</li> </ul>	Allows V Series Proxy or GigaVUE-FM to communicate with V Series node
Inbound	<ul style="list-style-type: none"> <li>UDP</li> <li>IP</li> </ul>	<ul style="list-style-type: none"> <li>UDP (VXLAN)</li> <li>IP Protocol (L2GRE)</li> </ul>	<ul style="list-style-type: none"> <li>VXLAN (default 4789)</li> <li>L2GRE</li> </ul>	G-vTAP Agent or Subnet IP	Allows G-vTAP Agents to (VXLAN/L2GRE) tunnel traffic to V Series nodes
Inbound	UDP	UDPGRE	4754	Ingress Tunnel	Allows to UDPGRE Tunnel to communicate and tunnel traffic to V Series nodes
Outbound	Custom UDP Rule	<ul style="list-style-type: none"> <li>UDP (VXLAN)</li> <li>IP Protocol (L2GRE)</li> </ul>	VXLAN (default 4789)	Tool IP	Allows V Series node to communicate and tunnel traffic to the Tool
Outbound (optional)	ICMP	ICMP	<ul style="list-style-type: none"> <li>echo request</li> <li>echo reply</li> </ul>	Tool IP	Allows V Series node to health check tunnel destination traffic

The following is the Network Firewall Requirements for V Series 1 node deployment.

Direction		Protocol	Port Range	Source and CIDR, IP, or Security Group	Purpose
<b>GigaVUE-FM Inside Azure</b>					
Inbound	HTTPS	TCP(6)	443	Anywhere Any IP	Allows G-vTAP Controllers, GigaVUE V Series Controllers, and GigaVUE-FM administrators to communicate with GigaVUE-FM
<b>G-vTAP Controller</b>					
Inbound	Custom TCP Rule	TCP	9900	Custom GigaVUE-FM IP	Allows GigaVUE-FM to communicate with G-vTAP Controllers
<b>G-vTAP Agent</b>					
Inbound	Custom TCP Rule	TCP	9901	Custom G-vTAP Controller IP	Allows G-vTAP Controllers to communicate with G-vTAP Agents
<b>GigaVUE V Series Controller</b>					
Inbound	Custom TCP Rule	TCP	9902	Custom GigaVUE-FM IP	Allows GigaVUE-FM to communicate with GigaVUE V Series Controllers
<b>GigaVUE V Series 1 node</b>					
Inbound	Custom TCP Rule	TCP	9903	Custom GigaVUE V Series Controller IP	Allows GigaVUE V Series Controllers to communicate with GigaVUE V Series nodes
<b>VXLAN Traffic</b>					
Inbound	Custom UDP Rule	VXLAN	4789		Allows mirrored traffic from G-vTAP Agents to be sent to GigaVUE V Series nodes using VXLAN tunnel Allows monitored traffic to be sent from GigaVUE V Series nodes to the tools using VXLAN tunnel

# GigaVUE V Series in AWS

V Series in AWS can be deployed in two ways – with or without the use of a V Series Proxy. When deployed with Proxy, GigaVUE-FM communication with the V Series Node via the Proxy node. This is typically useful when GigaVUE-FM is deployed in a VPC that is different than where V Series Nodes are deployed, which makes direct communication with the V Series Nodes unfeasible.

## Recommended Instance Types for AWS

GigaVUE fabric component	Recommended Instance Types
GigaVUE V Series Proxy	t2.micro
GigaVUE V Series Node	c5n.xlarge c5n.2xlarge t3a.xlarge

**NOTE:** Additional instance types are also supported. Refer to Support, Sales, or Professional Services for deployment optimization.

GigaVUE V Series 2 deployments in AWS can also be deployed in conjunction with a Network Load Balancer. Refer to the [Configure an External Load Balancer](#) topic for more information.

More detailed information and step-by-step instructions for deployment, refer to the [GigaVUE Cloud Suite for AWS–GigaVUE V Series 2](#).

## Network Firewall Requirements for AWS

Following is the Network Firewall Requirements for V Series 2 node deployment.

Direction	Type	Protocol	Port	CIDR	Purpose
<b>GigaVUE-FM</b>					
Inbound	<ul style="list-style-type: none"> <li>HTTPS</li> <li>SSH</li> </ul>	TCP	<ul style="list-style-type: none"> <li>443</li> <li>22</li> </ul>	Administrator Subnet	Management connection to GigaVUE-FM
Outbound	Custom TCP Rule	TCP(6)	9900	GigaVUE-FM IP	Allows G-vTAP Controller to communicate with GigaVUE-FM

Direction	Type	Protocol	Port	CIDR	Purpose
Outbound (optional)	Custom TCP Rule	TCP	8890	V Series Proxy IP	Allows GigaVUE-FM to communicate with V Series Proxy
Outbound	Custom TCP Rule	TCP	8889	V Series 2 Node IP	Allows GigaVUE-FM to communicate with V Series node
<b>G-vTAP Controller</b>					
Inbound	Custom TCP Rule	TCP(6)	9900	GigaVUE-FM IP	Allows G-vTAP Controller to communicate with GigaVUE-FM
Outbound	Custom TCP Rule	TCP(6)	9901	G-vTAP Controller IP	Allows G-vTAP Controller to communicate with G-vTAP Agents
<b>G-vTAP Agent</b>					
Inbound	Custom TCP Rule	TCP(6)	9901	G-vTAP Controller IP	Allows G-vTAP Agents to communicate with G-vTAP Controller
Outbound	<ul style="list-style-type: none"> <li>● UDP</li> <li>● IP</li> </ul>	<ul style="list-style-type: none"> <li>● UDP (VXLAN)</li> <li>● IP Protocol (L2GRE)</li> </ul>	VXLAN (default 4789)	G-vTAP Agent or Subnet IP	Allows G-vTAP Agents to (VXLAN/L2GRE) tunnel traffic to V Series nodes
<b>V Series Proxy (optional)</b>					
Inbound	Custom TCP Rule	TCP	8890	GigaVUE-FM IP	Allows GigaVUE-FM to communicate with V Series Proxy
Outbound	Custom TCP Rule	TCP	8889	V Series 2 node IP	Allows V Series Proxy to communicate with V Series node
<b>V Series 2 node</b>					
Inbound	Custom TCP Rule	TCP	8889	<ul style="list-style-type: none"> <li>● GigaVUE-FM IP</li> <li>● V Series Proxy IP</li> </ul>	Allows V Series Proxy or GigaVUE-FM to communicate with V Series node
Inbound	<ul style="list-style-type: none"> <li>● UDP</li> <li>● IP</li> </ul>	<ul style="list-style-type: none"> <li>● UDP (VXLAN)</li> <li>● IP Protocol (L2GRE)</li> </ul>	<ul style="list-style-type: none"> <li>● VXLAN (default 4789)</li> <li>● L2GRE</li> </ul>	G-vTAP Agent or Subnet IP	Allows G-vTAP Agents to (VXLAN/L2GRE) tunnel traffic to V Series nodes

Direction	Type	Protocol	Port	CIDR	Purpose
Inbound	UDP	UDPGRE	4754	Ingress Tunnel	Allows to UDPGRE Tunnel to communicate and tunnel traffic to V Series nodes
Outbound	Custom UDP Rule	<ul style="list-style-type: none"> <li>• UDP (VXLAN)</li> <li>• IP Protocol (L2GRE)</li> </ul>	VXLAN (default 4789)	Tool IP	Allows V Series node to communicate and tunnel traffic to the Tool
Outbound (optional)	ICMP	ICMP	<ul style="list-style-type: none"> <li>• echo request</li> <li>• echo reply</li> </ul>	Tool IP	Allows V Series node to health check tunnel destination traffic

## GigaVUE-FM Version Compatibility Matrix

The following tables list the different versions of GigaVUE Cloud Suite Cloud Suite solutions, GigaVUE cloud components with different versions of GigaVUE-FM.

Refer to the following topics for detailed information:

- [Version Compatibility for V Series 2 Configuration](#)
- [Version Compatibility for V Series 1 Configuration](#)

### Version Compatibility for V Series 2 Configuration

GigaVUE-FM	GigaVUE Cloud Suites	G-vTAP Agent	G-vTAP Controller	GigaVUE V Series Node	GigaVUE V Series Proxy
6.0.00	AWS	v1.8-7	v1.8-7	v2.7.0	v2.7.0
	Azure	v1.8-7	v1.8-7	v2.7.0	v2.7.0
	OpenStack	v1.8-7	v1.8-7	v2.7.0	v2.7.0
	VMware	N/A	N/A	v2.7.0	N/A
	AnyCloud	v1.8-7	v1.8-7	v2.7.0	v2.7.0

GigaVUE-FM	GigaVUE Cloud Suites	G-vTAP Agent	G-vTAP Controller	GigaVUE V Series Node	GigaVUE V Series Proxy
5.16.00	AWS	v1.8-5	v1.8-5	v2.6.0	v2.6.0
	Azure	v1.8-5	v1.8-5	v2.6.0	v2.6.0
	OpenStack	v1.8-5	v1.8-5	v2.6.0	v2.6.0
	VMware	N/A	N/A	v2.6.0	N/A
	AnyCloud	v1.8-5	v1.8-5	v2.6.0	v2.6.0
5.15.00	AWS	v1.8-5	v1.8-5	v2.5.0	v2.5.0
	Azure	v1.8-5	v1.8-5	v2.5.0	v2.5.0
	OpenStack	v1.8-5	v1.8-5	v2.5.0	v2.5.0
	VMware	N/A	N/A	v2.5.0	N/A
	AnyCloud	v1.8-5	v1.8-5	v2.5.0	v2.5.0
5.14.00	AWS	v1.8-4	v1.8-4	v2.4.0	v2.4.0
	Azure	v1.8-4	v1.8-4	v2.4.0	v2.4.0
	OpenStack	v1.8-4	v1.8-4	v2.4.0	v2.4.0
	VMware	N/A	N/A	v2.4.0	N/A
	AnyCloud	v1.8-4	v1.8-4	v2.4.0	v2.4.0
5.13.01	AWS	v1.8-3	v1.8-3	v2.3.3	v2.3.3
	Azure	v1.8-3	v1.8-3	v2.3.3	v2.3.3
	OpenStack	v1.8-3	v1.8-3	v2.3.3	v2.3.3
	VMware	N/A	N/A	v2.3.3	N/A
	AnyCloud	v1.8-3	v1.8-3	v2.3.3	v2.3.3

GigaVUE-FM	GigaVUE Cloud Suites	G-vTAP Agent	G-vTAP Controller	GigaVUE V Series Node	GigaVUE V Series Proxy
5.13.00	AWS	v1.8-2	v1.8-2	v2.3.0	v2.3.0
	Azure	v1.8-2	v1.8-2	v2.3.0	v2.3.0
	OpenStack	v1.8-2	v1.8-2	v2.3.0	v2.3.0
	VMware	N/A	N/A	v2.3.1	N/A
5.12.01	AWS	v1.8-1	v1.8-1	v2.2.0	v2.2.0
	OpenStack	v1.8-1	v1.8-1	v2.2.0	v2.2.0
	VMware	N/A	N/A	v2.2.1	N/A
5.12.00	AWS	v1.7-1	v1.7-1	v2.1.0	v2.1.0
	OpenStack	v1.7-1	v1.7-1	v2.1.0	v2.1.0
	VMware	N/A	N/A	v2.2.0	N/A

## Version Compatibility for V Series 1 Configuration

GigaVUE-FM	GigaVUE Cloud Suites	G-vTAP Agent	G-vTAP Controller	GigaVUE V Series Node	GigaVUE V Series Controller
6.0.00	AWS	v1.8-7	v1.8-7	v1.7-4	v1.7-4
	Azure	v1.8-7	v1.8-7	v1.7-4	v1.7-4
	OpenStack	v1.8-7	v1.8-7	v1.7-4	v1.7-4
	AnyCloud	v1.8-7	v1.8-7	v1.7-4	v1.7-4
5.16.00	AWS	v1.8-5	v1.8-5	v1.7-3	v1.7-3
	Azure	v1.8-5	v1.8-5	v1.7-3	v1.7-3
	OpenStack	v1.8-5	v1.8-5	v1.7-3	v1.7-3
	AnyCloud	v1.8-5	v1.8-5	v1.7-3	v1.7-3

GigaVUE-FM	GigaVUE Cloud Suites	G-vTAP Agent	G-vTAP Controller	GigaVUE V Series Node	GigaVUE V Series Controller
5.15.00	AWS	v1.8-5	v1.8-5	v1.7-2	v1.7-2
	Azure	v1.8-5	v1.8-5	v1.7-2	v1.7-2
	OpenStack	v1.8-5	v1.8-5	v1.7-2	v1.7-2
	AnyCloud	v1.8-5	v1.8-5	v1.7-2	v1.7-2
5.14.00	AWS	v1.8-4	v1.8-4	v1.7-1	v1.7-1
	Azure	v1.8-4	v1.8-4	v1.7-1	v1.7-1
	OpenStack	v1.8-4	v1.8-4	v1.7-1	v1.7-1
	AnyCloud	v1.8-4	v1.8-4	v1.7-1	v1.7-1
5.10.01, 5.11.00, 5.11.01, 5.12.00, 5.13.00, 5.13.01	AWS	v1.7-1	v1.7-1	v1.7-1	v1.7-1
	Azure	v1.7-1	v1.7-1	v1.7-1	v1.7-1
	OpenStack	v1.7-1	v1.7-1	v1.7-1	v1.7-1
	AnyCloud	v1.7-1	v1.7-1	v1.7-1	v1.7-1

## Supported GigaSMART Operations

The following table lists the supported GigaSMART operations by GigaVUE V Series 2 Nodes.

GigaSMART Operation	GigaVUE Cloud Suite for AWS	GigaVUE Cloud Suite for Azure	GigaVUE Cloud Suite for OpenStack	GigaVUE Cloud Suite for VMware	GigaVUE Cloud Suite for AnyCloud
Masking	✓	✓	✓	✓	✓
Packet Slicing	✓	✓	✓	✓	✓

GigaSMART Operation	GigaVUE Cloud Suite for AWS	GigaVUE Cloud Suite for Azure	GigaVUE Cloud Suite for OpenStack	GigaVUE Cloud Suite for VMware	GigaVUE Cloud Suite for AnyCloud
De-Duplication	✓	✓	✗	✓	✗
Observability Gateway	✓	✓	✗	✓	✗
L2GRE Tunnel Encapsulation	✓	✗	✓	✓	✗
VXLAN Tunnel Encapsulation	✓	✓	✓	✓	✗
L2GRE Tunnel Decapsulation	✓	✗	✓	✓	✗
VXLAN Tunnel Decapsulation	✓	✓	✓	✓	✗
ERSPAN Tunnel Decapsulation	✓	✗	✓	✓	✗
UDPGRE Tunnel Decapsulation	✓	✗	✓	✓	✗
GENEVE Decap	✓	✗	✗	✓ (NSX-T)	✗
Header Stripping	✗	✗	✗	✗	✗
Header Addition	✗	✗	✗	✗	✗
FlowVUE (IP-based)	✗	✗	✗	✗	✗
Adaptive Packet Filtering (APF) without RegEx	✓	✓	✓	✓	✗
Application Session Filtering (ASF)	✓	✓	✗	✓	✗
Application Filtering Intelligence (AFI)	✓	✓	✗	✓	✗
Application Metadata Intelligence(AMI)	✓	✓ (Includes NetFlow)	✓ (Supports only NetFlow)	✓	✗
Application Visualization	✓	✓	✗	✓	✗
Load Balancing (Stateless)	✓	✓	✓	✓	✗

GigaSMART Operation	GigaVUE Cloud Suite for AWS	GigaVUE Cloud Suite for Azure	GigaVUE Cloud Suite for OpenStack	GigaVUE Cloud Suite for VMware	GigaVUE Cloud Suite for AnyCloud
Load Balancing (Stateful)	x	x	x	x	x
SSL Decryption for Out-of-Band Tools (Passive SSL)	x	x	x	x	✓
SSL Decryption for Inline Tools	x	x	x	x	x

## GigaVUE V Series Logs and Commands

### CLI Commands

Device/Component	Platform	Commands
GvTAP Controller	AWS/OpenStack/Azure/Anycloud	gvtapr
GvTAP OVS Controller	OpenStack	gvtapr
GvTAP Agent Log	AWS/OpenStack/Azure/Anycloud	gvtapl
GvTAP OVS Agent Log	OpenStack	gvtapl
V Series Node	AWS/OpenStack/Azure/Vmware/Anycloud	<p>apiv</p> <div style="border: 1px solid gray; padding: 5px; margin: 5px 0;"> <p><u>apiv stats collection command</u></p> <pre>gigamon@ip-10-0-4-66:~\$ apiv stats</pre> </div> <p>Location: /var/opt/vseries/sysdumps/sysdump-vseries-date-time/</p>

## Logs

Device/Component	Platform	Logs
Fabric Manager(FM)	NA	<i>https://&lt;FM IP&gt;/api/0.9/sys/log/file/vmm.log</i>
GvTAP Controller	AWS/OpenStack/Azure/Anycloud	<i>/var/log</i>
GvTAP OVS Controller	OpenStack	<i>/var/log/syslog</i>
GvTAP Agent	AWS/OpenStack/Azure/Anycloud	<i>/var/log</i>
GvTAP OVS Agent Log	OpenStack	<i>/var/log/gvtap-agent.log</i>
V Series Controller	AWS/OpenStack/Azure/Anycloud	<i>/var/log</i>
V Series Node	AWS/OpenStack/Azure/VMware/Anycloud	<p><u>Sysdump generation</u></p> <pre> 1   gigamon@ip-10-0-4-66:~\$ apiv -x post     system/sysdumpGenerate &lt;&lt; EOF 2   &gt;EOF </pre> <p>Location: <i>/var/opt/vseries/sysdumps</i></p>

# Additional Sources of Information

This appendix provides additional sources of information. Refer to the following sections for details:

- [Documentation](#)
- [Documentation Feedback](#)
- [Contact Technical Support](#)
- [Contact Sales](#)
- [The Gigamon Community](#)

## Documentation

This table lists all the guides provided for GigaVUE Cloud Suite software and hardware. The first row provides an All-Documents Zip file that contains all the guides in the set for the release.

**NOTE:** In the online documentation, view [What's New](#) to access quick links to topics for each of the new features in this Release; view [Documentation Downloads](#) to download all PDFs.

Table 1: Documentation Set for Gigamon Products

GigaVUE Cloud Suite 6.0 Hardware and Software Guides
<b>DID YOU KNOW?</b> If you keep all PDFs for a release in common folder, you can easily search across the doc set by opening one of the files in Acrobat and choosing <b>Edit &gt; Advanced Search</b> from the menu. This opens an interface that allows you to select a directory and search across all PDFs in a folder.
<b>Hardware</b> how to unpack, assemble, rack-mount, connect, and initially configure ports the respective GigaVUE Cloud Suite devices; reference information and specifications for the respective GigaVUE Cloud Suite devices
<b>*G-TAP A Series 2 Installation Guide</b>
GigaVUE-HC1 Hardware Installation Guide
GigaVUE-HC2 Hardware Installation Guide
GigaVUE-HC3 Hardware Installation Guide
GigaVUE-HC1-PLUS Hardware Installation Guide
GigaVUE M Series Hardware Installation Guide
GigaVUE-TA25 Hardware Installation Guide

<b>GigaVUE Cloud Suite 6.0 Hardware and Software Guides</b>	
	GigaVUE-TA200 Hardware Installation Guide
	GigaVUE-TA400 Hardware Installation Guide
	GigaVUE-TA10 Hardware Installation Guide
	GigaVUE-TA40 Hardware Installation Guide
	GigaVUE-TA100 Hardware Installation Guide
	GigaVUE-TA100-CXP Hardware Installation Guide
	*GigaVUE-OS Installation Guide for DELL S4112F-ON
	GigaVUE-FM Hardware Appliance Guide for GFM-HW1-FM010 and and GFM-HW1-FM001-HW
<b>Software Installation and Upgrade Guides</b>	
	GigaVUE-FM Installation, Migration, and Upgrade Guide
	GigaVUE-OS Upgrade Guide
<b>Fabric Management and Administration Guides</b>	
	<b>GigaVUE Administration Guide</b> covers both GigaVUE-OS and GigaVUE-FM
	<b>GigaVUE Fabric Management Guide</b> how to install, deploy, and operate GigaVUE-FM; how to configure GigaSMART operations; covers both GigaVUE-FM and GigaVUE-OS features
<b>Cloud Guides</b> how to configure the GigaVUE Cloud Suite components and set up traffic monitoring sessions for the cloud platforms	
	GigaVUE V Series Quick Start Guide
	GigaVUE Cloud Suite for AWS—GigaVUE V Series 2 Guide
	GigaVUE Cloud Suite for Azure—GigaVUE V Series 2 Guide
	GigaVUE Cloud Suite for OpenStack—GigaVUE V Series 2 Guide
	GigaVUE Cloud Suite for VMware—GigaVUE V Series Guide
	GigaVUE Cloud Suite for AnyCloud Guide
	Universal Container Tap Guide
	Gigamon Containerized Broker Guide
	GigaVUE Cloud Suite for Kubernetes Guide
	GigaVUE Cloud Suite for AWS—GigaVUE V Series 1 Guide

GigaVUE Cloud Suite 6.0 Hardware and Software Guides	
GigaVUE Cloud Suite for OpenStack–GigaVUE V Series 1 Guide	
GigaVUE Cloud Suite for Nutanix Guide	
GigaVUE Cloud Suite for VMware—GigaVUE-VM Guide	
Reference Guides	
<b>GigaVUE-OS CLI Reference Guide</b> library of GigaVUE-OS CLI (Command Line Interface) commands used to configure and operate GigaVUE H Series and TA Series devices	
<b>GigaVUE-OS Cabling Quick Reference Guide</b> guidelines for the different types of cables used to connect Gigamon devices	
<b>GigaVUE-OS Compatibility and Interoperability Matrix</b> compatibility information and interoperability requirements for Gigamon devices	
<b>GigaVUE-FM REST API Reference in GigaVUE-FM User's Guide</b> samples uses of the GigaVUE-FM Application Program Interfaces (APIs)	
Release Notes	
<b>GigaVUE-OS, GigaVUE-FM, GigaVUE-VM, G-TAP A Series, and GigaVUE Cloud Suite Release Notes</b> new features, resolved issues, and known issues in this release ; important notes regarding installing and upgrading to this release	
<b>NOTE:</b> Release Notes are not included in the online documentation.	
<b>NOTE:</b> Registered Customers can log in to <a href="#">My Gigamon</a> to download the Software and Release Notes from the Software & Docs page on to <a href="#">My Gigamon</a> . Refer to <a href="#">How to Download Software and Release Notes from My Gigamon</a> .	
In-Product Help	
<b>GigaVUE-FM Online Help</b> how to install, deploy, and operate GigaVUE-FM.	

## How to Download Software and Release Notes from My Gigamon

Registered Customers can download software and corresponding Release Notes documents from the **Software & Release Notes** page on to [My Gigamon](#). Use the My Gigamon Software & Docs page to download:

- Gigamon Software installation and upgrade images,
- Release Notes for Gigamon Software, or

- Older versions of PDFs (pre-v5.7).

To download release-specific software, release notes, or older PDFs:

1. Log in to [My Gigamon](#)
2. Click on the **Software & Release Notes** link.
3. Use the **Product** and **Release** filters to find documentation for the current release. For example, select Product: "GigaVUE-FM" and Release: "5.6," enter "pdf" in the search box, and then click **GO** to view all PDF documentation for GigaVUE-FM 5.6.xx.

**NOTE:** My Gigamon is available to registered customers only. Newer documentation PDFs, with the exception of release notes, are all available through the publicly available online documentation.

## Documentation Feedback

We are continuously improving our documentation to make it more accessible while maintaining accuracy and ease of use. Your feedback helps us to improve. To provide feedback and report issues in our documentation, send an email to:

[documentationfeedback@gigamon.com](mailto:documentationfeedback@gigamon.com)

Please provide the following information in the email to help us identify and resolve the issue. Copy and paste this form into your email, complete it as able, and send. We will respond as soon as possible.

Documentation Feedback Form		
<b>About You</b>	Your Name	
	Your Role	
	Your Company	
<b>For Online Topics</b>	Online doc link	<i>(URL for where the issue is)</i>
	Topic Heading	<i>(if it's a long topic, please provide the heading of the section where the issue is)</i>

For PDF Topics	Document Title	<i>(shown on the cover page or in page header )</i>
	Product Version	<i>(shown on the cover page)</i>
	Document Version	<i>(shown on the cover page)</i>
	Chapter Heading	<i>(shown in footer)</i>
	PDF page #	<i>(shown in footer)</i>
How can we improve?	Describe the issue	<i>Describe the error or issue in the documentation. (If it helps, attach an image to show the issue.)</i>
	How can we improve the content? Be as specific as possible.	
	Any other comments?	

## Contact Technical Support

For information about Technical Support: Go to **Settings**  > **Support** > **Contact Support** in GigaVUE-FM.

You can also refer to <https://www.gigamon.com/support-and-services/contact-support> for Technical Support hours and contact information.

Email Technical Support at [support@gigamon.com](mailto:support@gigamon.com).

# Contact Sales

Use the following information to Gigamon channel partner or Gigamon sales representatives.

**Telephone:** +1.408.831.4025

**Sales:** [inside.sales@gigamon.com](mailto:inside.sales@gigamon.com)

**Partners:** [www.gigamon.com/partners.html](http://www.gigamon.com/partners.html)

# Premium Support

Email Gigamon at [inside.sales@gigamon.com](mailto:inside.sales@gigamon.com) for information on purchasing 24x7 Premium Support. Premium Support entitles you to round-the-clock phone support with a dedicated Support Engineer every day of the week.

# The Gigamon Community

The [Gigamon Community](#) is a technical site where Gigamon users, partners, security and network professionals and Gigamon employees come together to share knowledge and expertise, ask questions, build their network and learn about best practices for Gigamon products.

Visit the Gigamon Community site to:

- Find knowledge base articles and documentation
- Ask and answer questions and learn best practices from other members.
- Join special-interest groups to have focused collaboration around a technology, use-case, vertical market or beta release
- Take online learning lessons and tutorials to broaden your knowledge of Gigamon products.
- Submit and vote on feature enhancements and share product feedback. (Customers only)
- Open support tickets (Customers only)
- Download the latest product updates and documentation (Customers only)

The Gigamon Community is a great way to get answers fast, learn from experts and collaborate directly with other members around your areas of interest.

**Register today at** [community.gigamon.com](http://community.gigamon.com)

**Questions?** Contact our Community team at [community@gigamon.com](mailto:community@gigamon.com).

# Glossary

## D

---

### decrypt list

need to decrypt (formerly blacklist)

### decryptlist

need to decrypt - CLI Command (formerly blacklist)

### drop list

selective forwarding - drop (formerly blacklist)

## F

---

### forward list

selective forwarding - forward (formerly whitelist)

## L

---

### leader

leader in clustering node relationship (formerly master)

## M

---

### member node

follower in clustering node relationship (formerly slave or non-master)

## N

---

### no-decrypt list

no need to decrypt (formerly whitelist)

**nodecryptlist**

no need to decrypt- CLI Command (formerly whitelist)

**P**

---

**primary source**

root timing; transmits sync info to clocks in its network segment (formerly grandmaster)

**R**

---

**receiver**

follower in a bidirectional clock relationship (formerly slave)

**S**

---

**source**

leader in a bidirectional clock relationship (formerly master)